

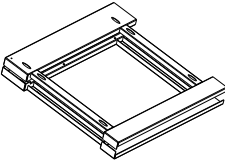
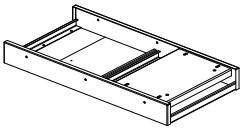

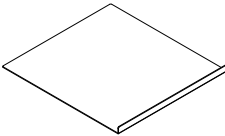


	Name	Qty.	Image
1	Frame	1 Nos.	
2	Bottom Base	1 No.	
3	Handle	2 Nos.	
4	Bottom Base Cover	2 Nos.	
5	Bolt & Scerws	1 Kit.	


Cabinet Dimension	
Cabinet Width (A)	1050-1100mm
Cabinet Depth (B)	560Min.
Height (C)	600-700mm
Door Width (D)	440-490mm

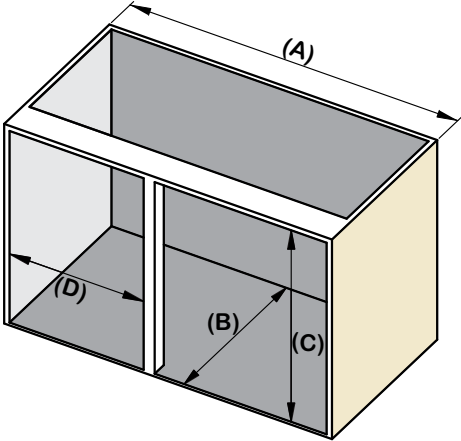


Step (3)
Place Frame on Bottom Base And
Fix With Bolt

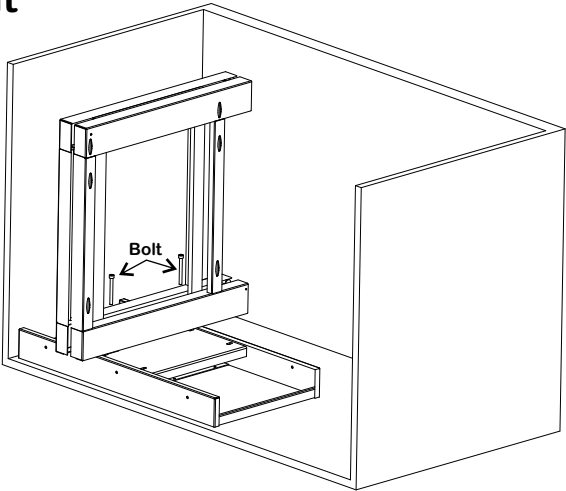


Step (4)
Fix Handle As Shown.

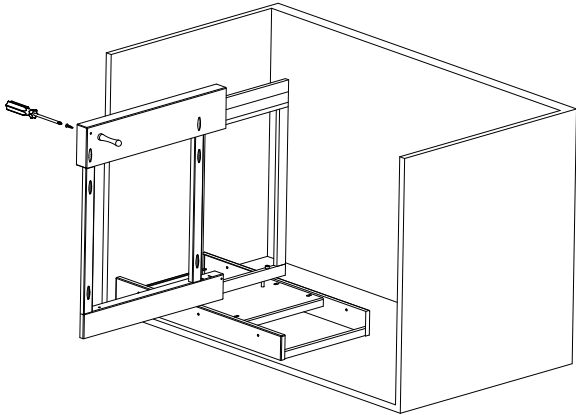

Step (5)
Hang Baskets
With Hook

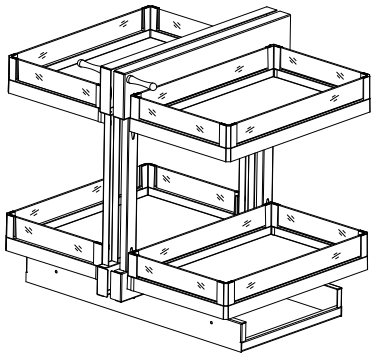

Step (1)
Place Bottom Base As Given
Dimensions.

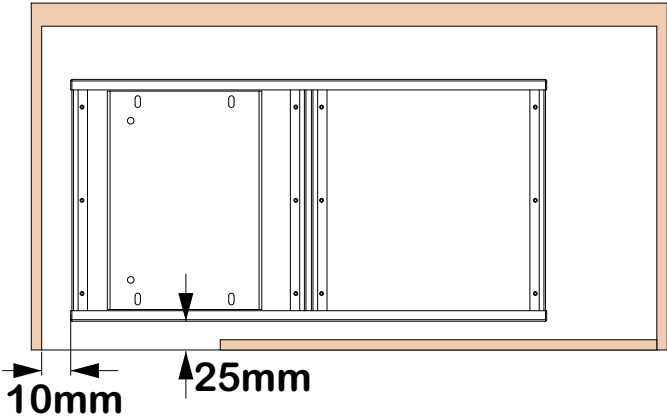

Step (2)
Fix Bottom Base.

